


6

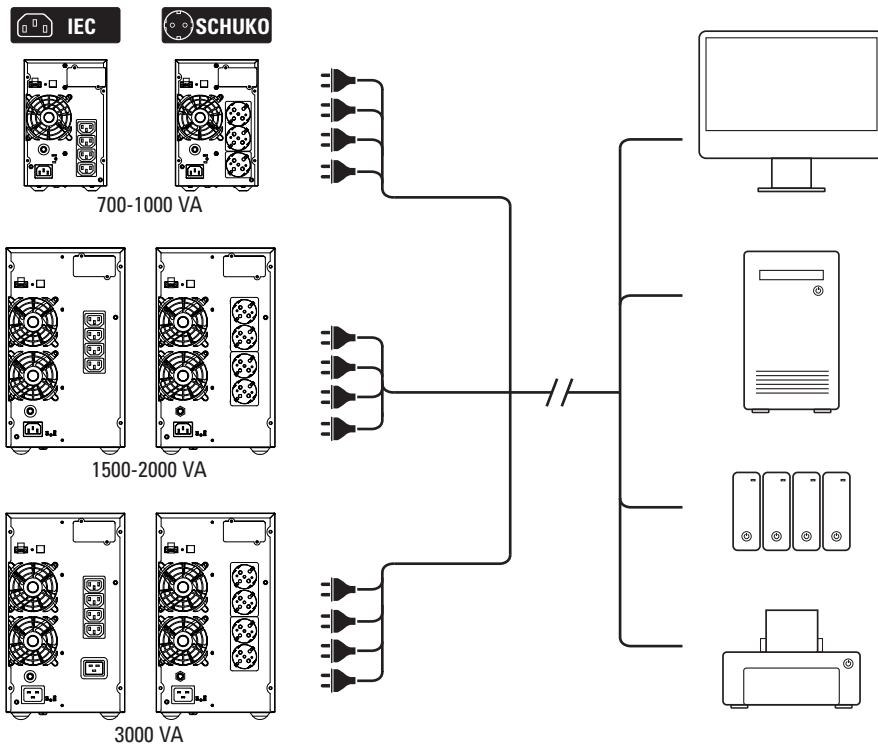




SLC TWIN PRO¹

QUICK START GUIDE


- SLC-700-TWIN PRO2
- SLC-1000-TWIN PRO2
- SLC-1500-TWIN PRO2
- SLC-2000-TWIN PRO2
- SLC-3000-TWIN PRO2



7

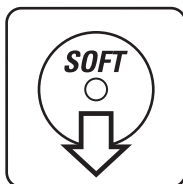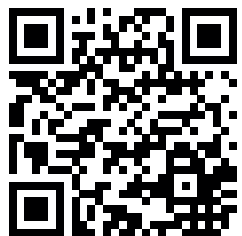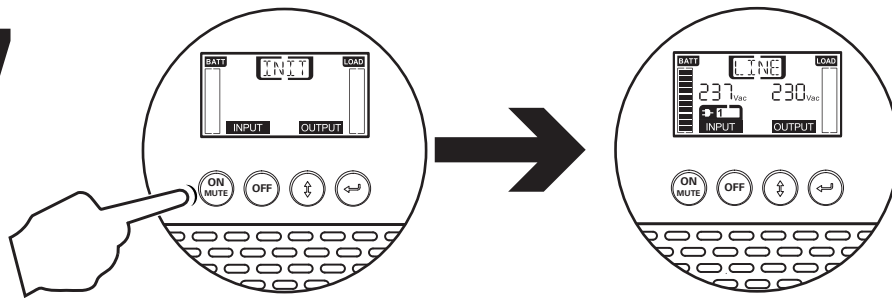

DOWNLOADABLE SOFTWARE:
www.salicru.com/support

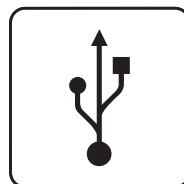


USBHID UPS




USER'S GUIDE:
www.salicru.com/support



1

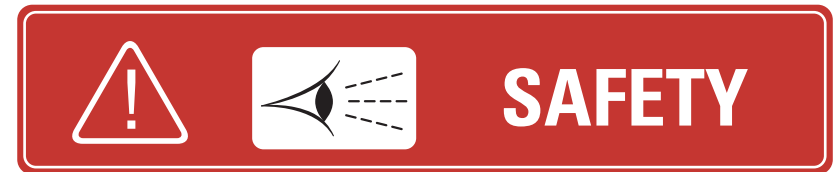


2

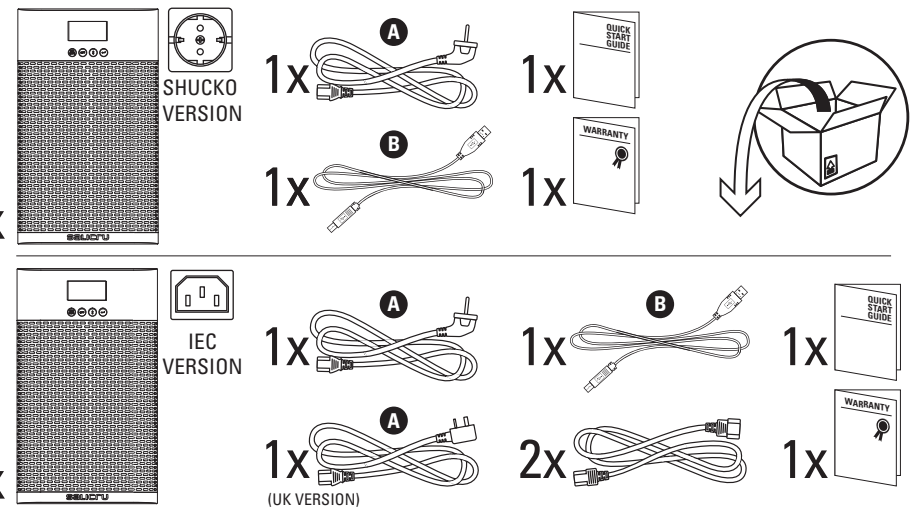


3

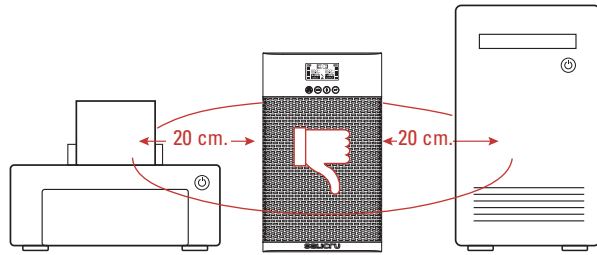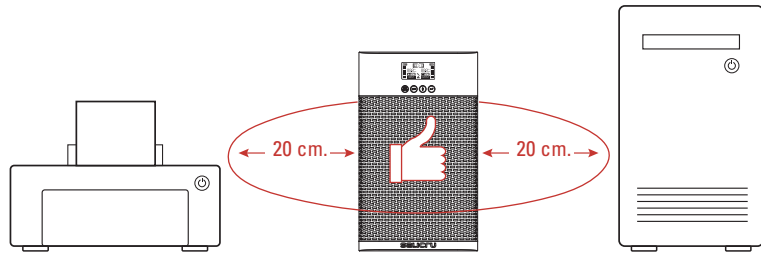


4.0

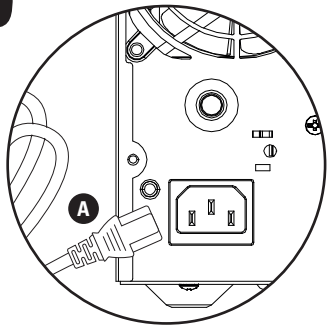





220V / 230V / 240V
50 Hz / 60 Hz

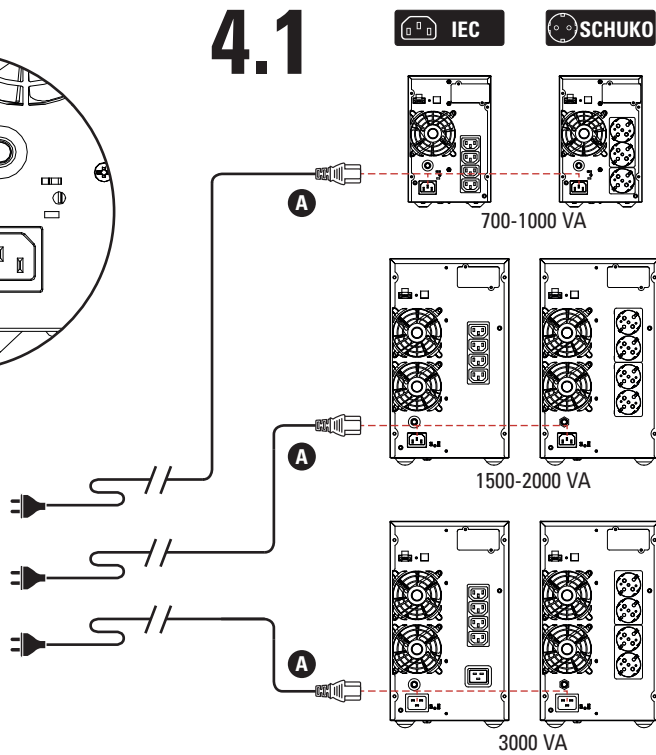

4.2

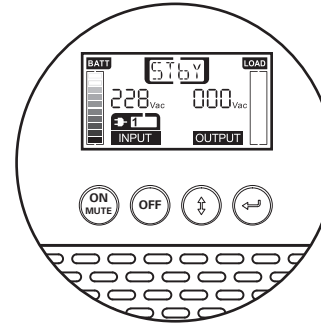

4.3

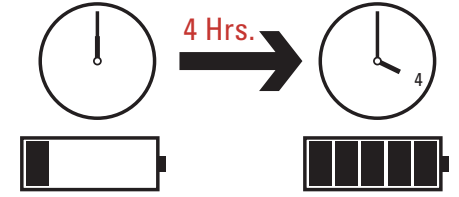

5

